

ASonic *ultrasonic cleaners*

USER MANUAL

ASonic HOME 1000



ULTRASONIC CLEANING OF OBJECTS
is fast, efficient and effortless!

Thank you for purchasing ultrasonic cleaner. Please take the time to read these operating instructions before use and retain them for future reference. Failure to follow these instructions may lead to serious personal injury and damage to property.

PREPARATION: Carefully unpack the cleaner and remove all traces of packing materials from it. Visually inspect the cleaner for any parts that may have become loose or damaged during transport.

USAGE:

1) Open the lid and fill the stainless steel tank with liquid.

Note: Running machine with no water will damage the cleaner!

2) Place items into water, the items should be completely covered by water. Do not exceed "MAX" level.

3) Close the lid and plug machine into power outlet.

4) Timer setting: press "ON/OFF". Display shows "180sec", press timer button to set it to "360sec", press it again to set it to "540sec", next time "720sec", next time "900", next time "17min", next time "20min", next time "23min", next time "26min", etc.

Adjust the timer according to the needs of cleaning process.

5) Press "ON/OFF" button to start ultrasonic operation. The indicator will light and work until expiration of the timer. Press "ON/OFF" button again during ultrasound operation and the ultrasound will stop working.

6) When cleaning is completed, unplug the power cord, remove the lid and retrieve the items. Pour the water out through the pouring recess. Clean and wipe the tank.

WARNING: Ultrasound operation generates heat. Unit needs to cool down for 30 minutes after 15 minutes of operation. Do not throw objects in the tank as it may cause damage.



On the left side of the control panel is the key "ON / OFF" to turn on or turn off the ultrasound. In the middle is the key "TIME" to set ultrasound timer.

On the right side is a button "RESET" which will reset the timer to starting value of 180 seconds.

SAFETY PERCAUTIONS:

This device is not intended to use by individual with restricted physical, sensor or mental capacities or those with lack of experience or knowledge, include children, unless they are supervised by an individual who is responsible for their safety or have received training in operating the device.

Store the appliance and package material out of reach of children!

- 1) Do not use the machine at damp place.
- 2) Never immerse the machine or power cord in water or other liquid.
- 3) Never touch the power plug with wet hands, especially when inserting or removing the plug to electric network.
- 4) Do not spray water or liquid over the device.
- 5) Do not operate the cleaner without proper grounding.
- 6) When removing the power cord from the socket, grab the power plug not the cord.
- 7) Please protect the power cord. Do not use the ultrasonic cleaner if the power plug or power cord are damaged.
- 8) Remove the power plug from the socket:
 - if malfunction occurs
 - before cleaning the machine or filling the liquid
 - if the device is not going to be used for a long time
- 9) Do not let the machine plugged in electricity unattended.
- 10) Do not disassemble the machine, except by authorised professionals.
- 11) Do not operate the unit without fluid in the tank. Always ensure the fluid is no higher than the MAX mark.
- 12) Do not place the device on a soft surface, or where ventilation will be blocked.
- 13) Keep machine away from heat and place on a dry and level surface.
- 14) Ultrasound operation generates heat that warms up liquid in the tank. Unit needs to cool down for 30 minutes after 15 minutes of operation.

CAUTION:

- 1) Not recommended for use with items that can be discolored, warer logged, or damaged easily. Loose, delicate, or inlaid items may become dislodged by ultrasonic vibration. For example: Semi-precious stones, cloth items, leather products, wood items, costume jewelry, or soft stones like pearls, opals, turquoise, coral, emeralds, etc.
- 2) Do not place mobile phones or non-waterproof watches into tank for cleaning.
- 3) Do not place glass frames or art ware that is made from tortoise shell or abalone shell.
- 4) When cleaning smaller pieces, place items into the plastic basket, then place basket into tank.

Ultrasonic cleaners are best suited for cleaning of: rings, necklaces, earring and other jewelry, glasses, watches, shaver heads, dentures and other personal items, pliers, test tubes, bottles, flasks and other lab equipment, tableware, toys, PCBs, printer heads and cartridges, bearings, valves, fuel injectors and other mechanical parts...

GUARANTEE CERTIFICATE

MODEL: ASonic HOME 1000

Thank You for purchasing this product, we hope you will be satisfied with it. If there is a need to repair the product within the guarantee period, we advise you to contact your dealer first. To avoid inconvenience, before calling the service we advise you to re-read the instructions.

Guarantee period: 1 year / 12 months.

STATEMENT OF THE GUARANTOR:

- The product will have prescribed or declared characteristics during the guarantee period. The provider of warranty within the warranty period, at its own expense provides service and removal of defects arising from mismatches between actual and declared specifications of the product. If provider of the guarantee is unable to fulfill this obligation, he will replace the product with new one or with the model of similar characteristics if the previous one is unavailable.
- Product will function correctly during the warranty period if it is used in accordance with its intended purpose and technical manual instructions. The provider of the guarantee commits to eliminate any failures and shortcomings that prevent product from working properly in the designated service center.
- This device is not intended for professional use.
- The owner of the device is obliged to make sure that guarantee is properly validated. If there is no validation, guarantee is void.
- Service for these appliances will be available for 5 years after sale.

TERMS OF GUARANTEE

Buyer can claim his rights by submitting original validated guarantee and original invoice with the date of purchase. The warranty does not apply if altered, crossed out or damaged. Before operating the appliance read the instruction that is supplied with each device.

1. The guarantee is considered valid when the defective device is delivered for service with the original invoice and validated guarantee certificate.

2. Guarantee is void if:

- The appliance is used in a different manner and for longer periods than recommended in the instructions;
- Repairs are made to the device by unauthorized persons;
- Installation of parts which are not original;
- Careless handling of the device;
- Product has suffered an electric shock or lightning;
- Damaged during transport;
- Improper installation of the device;
- Damage caused by mechanical hits to the device by the customer or third parties.

WHEN RECEIVING THE GOODS, BUYER MUST MAKE SURE THAT DEVICE IS COMPLETE WITH ALL PARTS AND PHYSICALLY INTACT, BECAUSE LATER RECLAMATIONS ON AFOREMENTIONED ISSUES WILL NOT BE ACCEPTED.

For all repairs under the guarantee, please contact the importer and distributor for Europe:
AVene Ltd. , Grosuplje, Slovenia.



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems) This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.